



NOTES:
1. U39, U40, CR9, AND CR10 NOT USED
2. IF RADIO SHACK KEYBOARD IS USED
REMOVE U34

